




## EUROPEAN CABINETS BOXES INSTALLATION GUIDE

### WALL CABINETS (WBC AS EXAMPLE)

#### ITEM NAMES

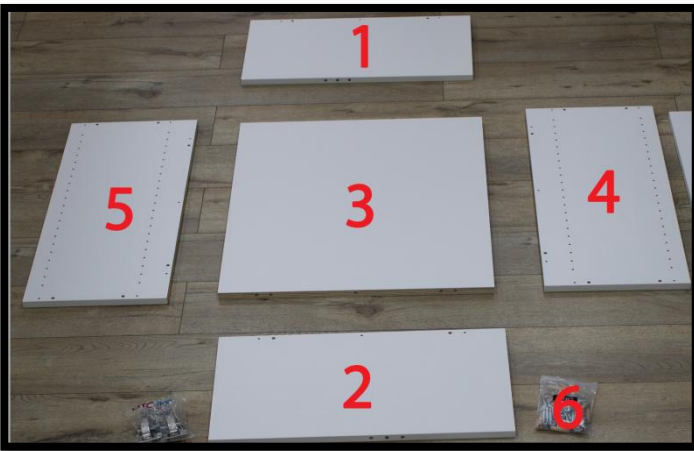

1. TOP
2. BOTTOM
3. BACK
4. SIDE 1
5. SIDE 2
6. HARDWARE ↓



CAMLOCKS



SILVER DOWELS  
FOR CAMLOCKS




WOOD DOWEL  
PINS

#### STEPS




1. Start with the TOP by installing 3 silver dowels which need to be inserted in the smaller holes.

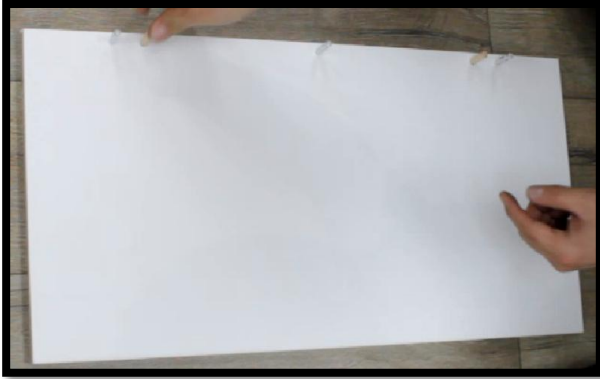

2. Insert 2 wood dowel pins into the remaining bigger holes, next to the silver dowels.



3. Repeat step 1 and 2 with the BOTTOM.

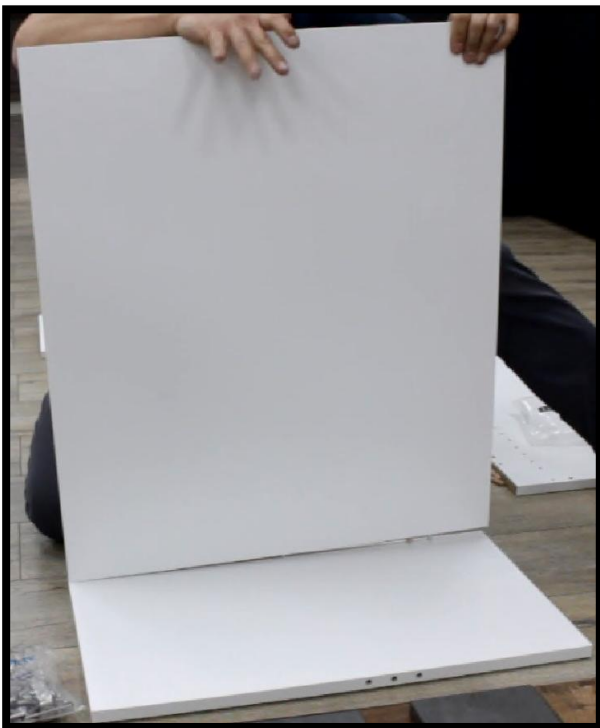


4. Connect the BOTTOM with the BACK by inserting the BOTTOM's dowels into the BACK's holes.



5. Connect the TOP with the BACK using the same method.



6. Move on with SIDE 1, installing a total of 7 silver dowels into the smaller holes at the edges.

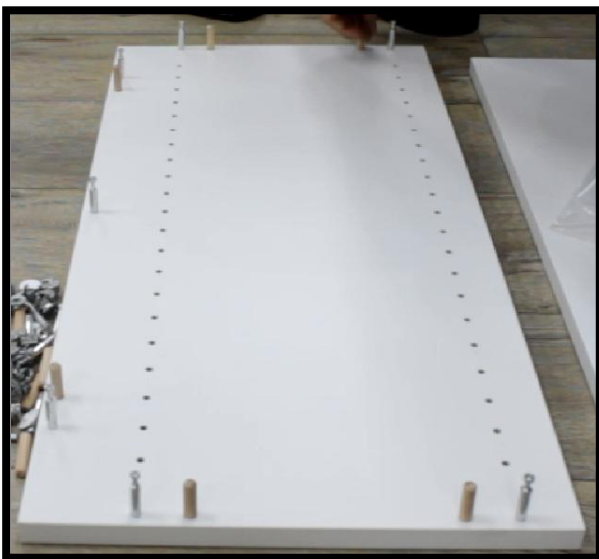

7. Insert 6 wood dowel pins into the remaining larger holes next to the silver dowels.



8. Connect SIDE 1 with the TOP and BOTTOM.




9. Repeat steps 6, 7, and 8 with SIDE 2.




10. Place 4 camlocks on the BOTTOM's corners and lock them with a screwdriver.


*\*\*\*The 2 extra camlock holes in the middle shown in the picture are for WBCs only. They are needed in order to insert WBCs' fillers.*

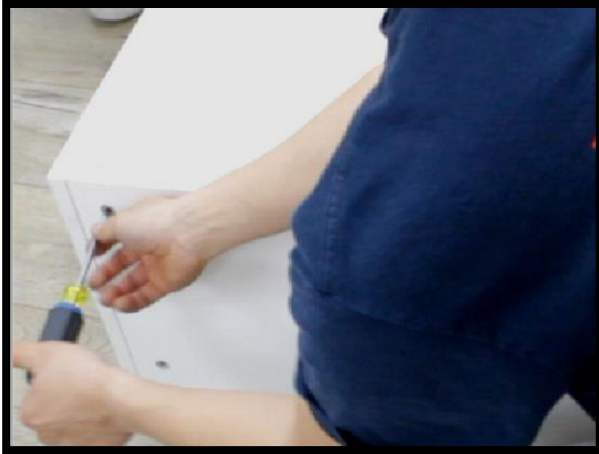

11. Repeat step 10 with the TOP.

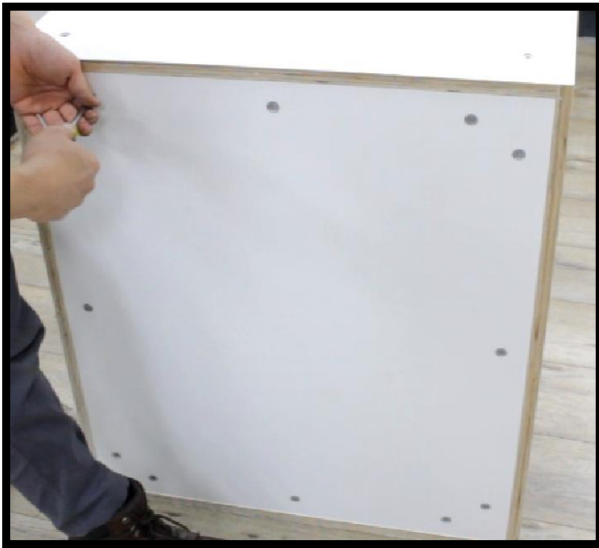

12. Place all 12 camlocks at the BACK's holes and lock them with a screwdriver.

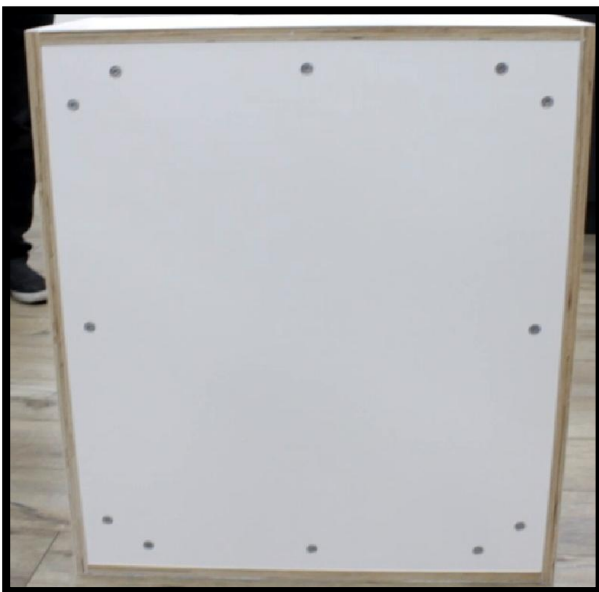


13. The wall box is now complete. This is a picture of the BACK with all camlocks in place.



## EUROPEAN CABINETS BOXES INSTALLATION GUIDE

### BASE CABINETS (B15 AS EXAMPLE)

#### ITEM NAMES

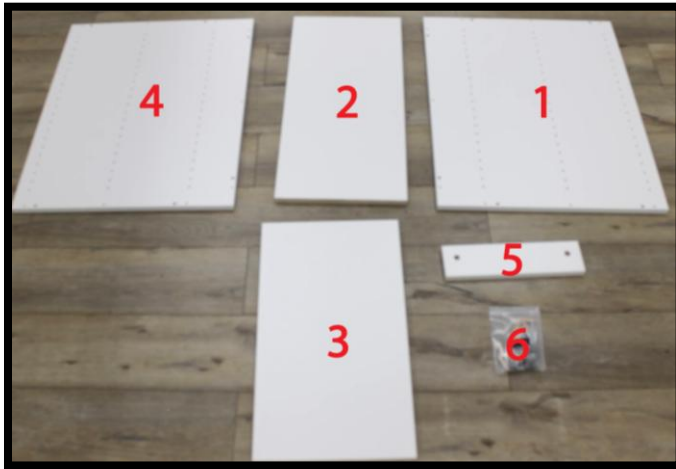

1. SIDE 1
2. BACK
3. BOTTOM
4. SIDE 2
5. TOP
6. HARDWARE ↓



CAMLOCKS



SILVER DOWELS  
FOR CAMLOCKS




WOOD DOWEL PINS

*\*The actual size of the items from the image is not in proportion to each other due to the camera's angle.*

#### STEPS




1. Start with SIDE 1 by installing 7 silver dowels at the right and bottom edges. The dowels need to be inserted in the smaller holes.

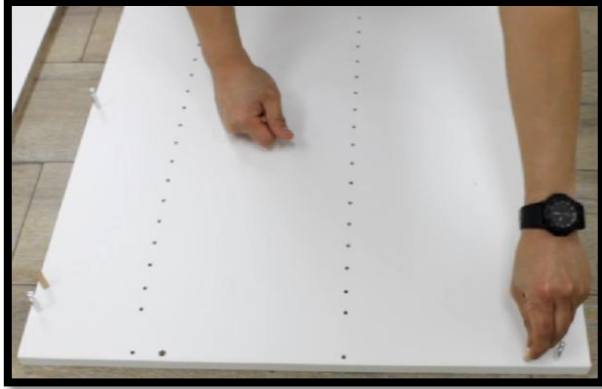


2. Repeat step 1, this time with 7 wood dowel pins which need to be inserted in the bigger holes right next to the silver dowels.



3. Once all 14 dowels have been installed, connect SIDE 1 into the BACK's holes.

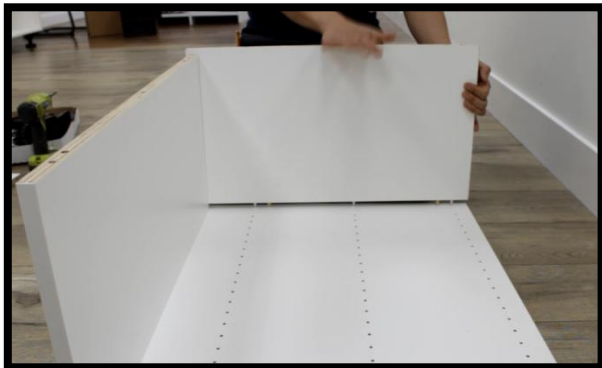


4. Repeat step 3 with the BOTTOM.

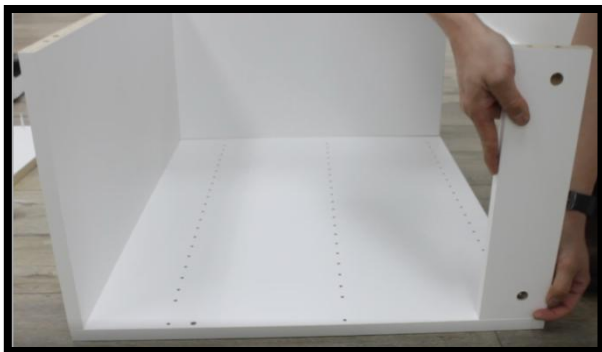


5. Insert the TOP so it stands vertically to the remaining pair of dowels from SIDE 1.



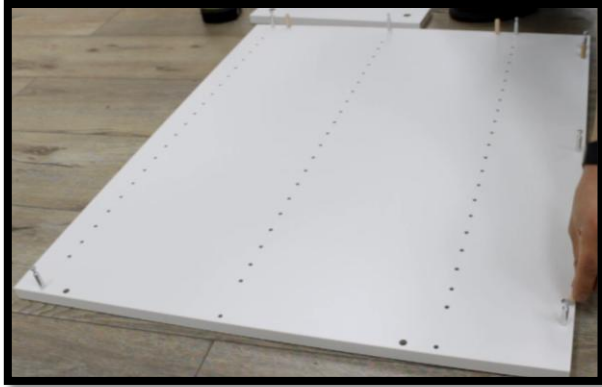

6. Repeat step 1 and 2 with SIDE 2.

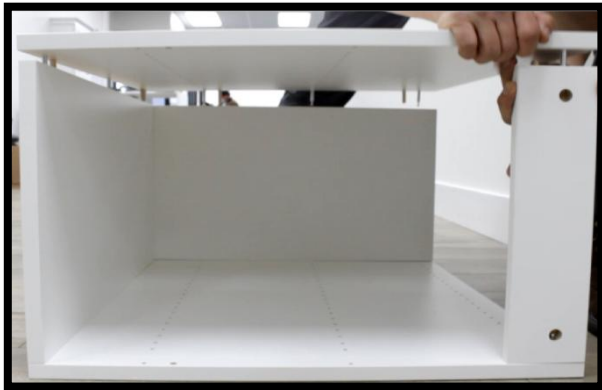

7. Connect SIDE 2 with the rest.



8. Insert 2 camlocks where the TOP holes are and lock them with a screwdriver.




9. Continue the same process with the BACK, this time with 6 camlocks.





10. Continue the same process with the BOTTOM.

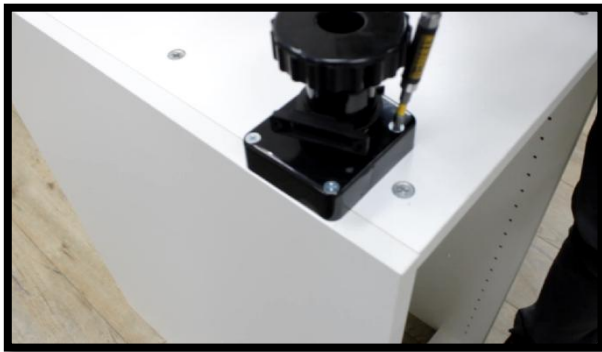

11. Once all camlocks have been locked, place each leg to the necessary position and lock it with 4 screws.



12. After 4 legs have been placed, make sure to adjust them all with the same height.




13. The base box is now complete. This is a picture of it located right next to our Lazy Susan's box.



## EUROPEAN CABINETS BOXES INSTALLATION GUIDE

### LAZY SUSAN (36"x36")

#### ITEM NAMES

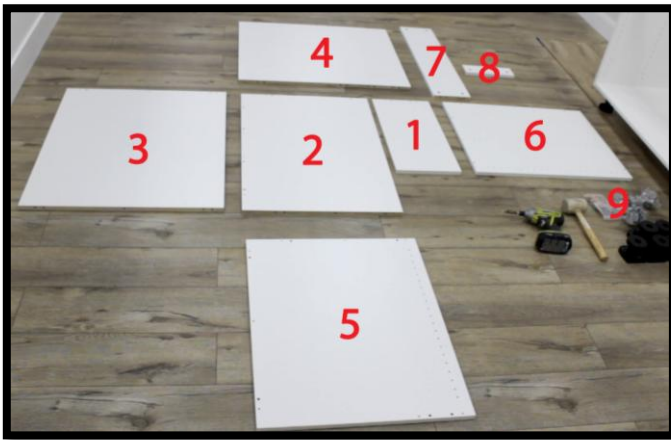

*\*The actual size of the items from the image is not in proportion to each other due to the camera's angle.*

1. SMALL BOTTOM
2. MAIN BOTTOM
3. BACK 1
4. BACK 2
5. SIDE 1
6. SIDE 2
7. MAIN TOP
8. SMALL TOP
9. HARDWARE ↓



CAMLOCKS



SILVER DOWELS  
FOR  
CAMLOCKS



WOOD DOWEL  
PINS

#### STEPS



1. Start with the SMALL BOTTOM by installing 3 silver dowels on the side's smaller holes.



2. Repeat step 1, this time with 2 wood dowel pins which need to be inserted in the bigger holes right next to the silver dowels.




3. Once all 5 dowels have been installed, connect it with the MAIN BOTTOM's holes.



4. At the back of the SMALL BOTTOM, Insert 3 camlocks where the connected area is and lock them with a screwdriver.



5. Insert 8 silver dowels to all the SMALL and MAIN BOTTOMS' holes. The SMALL and MAIN BOTTOM now act together as one piece.

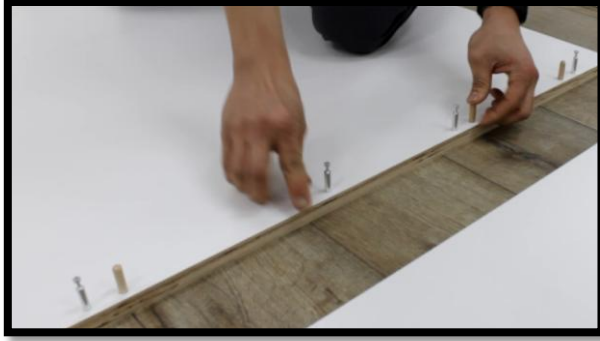

6. Insert 8 wood dowel pins next to the silver dowels' holes.



7. Move on with BACK 1 and install 3 silver dowels and 2 wood dowels into the holes.




8. Connect BACK 1 with BACK 2.



9. Place 3 camlocks into BACK 2's holes area that was connected with BACK 1. Lock them with a screwdriver.



10. Now that BACK 1 and 2 are one piece, connect them with the BOTTOM piece.

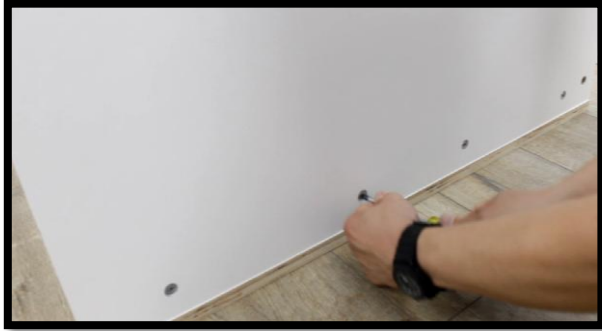

11. Insert 4 camlocks into BACK 1's holes area that was connected with the BOTTOM. Lock them with a screwdriver



12. Repeat the same process with BACK 2.



13. Move on with SIDE 1 by installing 8 silver dowels first.



14. Continue by putting in 6 wood dowel pins next to the silver dowels. Once all the dowels have been installed, save SIDE 1 for step 17.



15. Before putting on the MAIN TOP, insert 2 silver dowels and 2 wood dowel pins into BACK 2's holes located at the top edge.



16. Insert the TOP into BACK 2's dowels. Place 2 camlocks into the connected area's holes and lock them with a screwdriver.



17. Flip the unfinished box to a position where the TOP will be sitting vertically. Then, connect SIDE 1 with the rest of the box.




18. Insert 2 camlocks into the TOP's holes and lock them with a screwdriver.



19. With the remaining holes of BACK 1, insert 3 camlocks into the holes and lock them with a screwdriver.



20. Continue the same process with the MAIN BOTTOM.

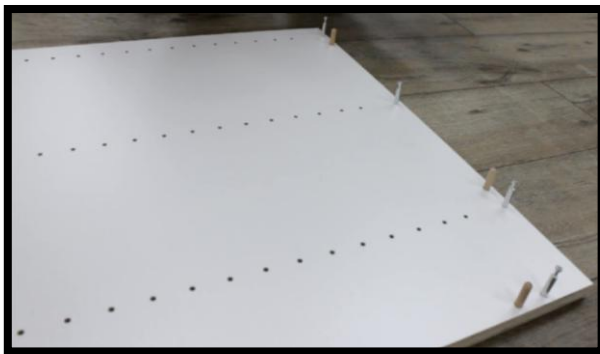


21. Insert 8 silver dowels and 6 wood dowel pins into SIDE 2's holes. Once all the dowels have been installed, save SIDE 2 for step 25.





22. If you look carefully around the center of the MAIN TOP's side, there will be 2 holes where you need to insert 1 silver dowel and 1 wood dowel pin.

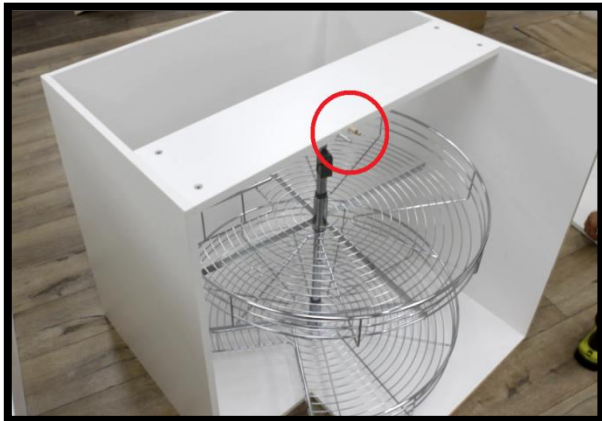

23. This is what the box looks like with the 2 dowels inserted. Before moving on with future steps, the revolving baskets should be installed first.



24. Connect the SMALL TOP with the MAIN TOP.



25. Connect SIDE 2 with the rest of the box's open area.



26. Insert 3 camlocks into the remaining holes of BACK 2 and lock them with a screwdriver.



27. Repeat the same process with the SMALL BOTTOM.




28. Repeat the same process with the SMALL TOP.



29. Once all camlocks have been locked, place each leg to the necessary position and lock it with 4 screws.



30. The 5 legs should be installed on each corner.

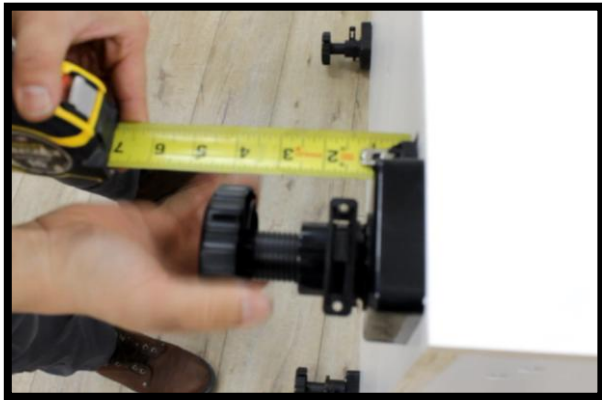

31. After 5 legs have been placed, make sure to adjust them all with the same height.



32. The Lazy Susan box is now complete!